

2014+ Harley-Davidson® M5-800X4 Tuning Guide



MOTORCYCLE AUDIO

#ROCKFORDFOSGATE



Maximum Radio Volume: 3 bars from highest level. Increasing volume past this level will damage your speakers.



Boom!™Box
Standard 4.3



Boom!™Box
Premium 6.5GT



Boom!™Box
Premium GTS




RADIO FLASH REQUIRED
"Rockford Fosgate Tune 2014+ All Models"

REMOTE TURN-ON REQUIRED
use turn-on from brake side

AMPLIFIER TUNING

Before installing amplifier, remove cover and set PRESET to OFF position. Verify remaining settings are properly configured. Replace cover for water-tight protection.

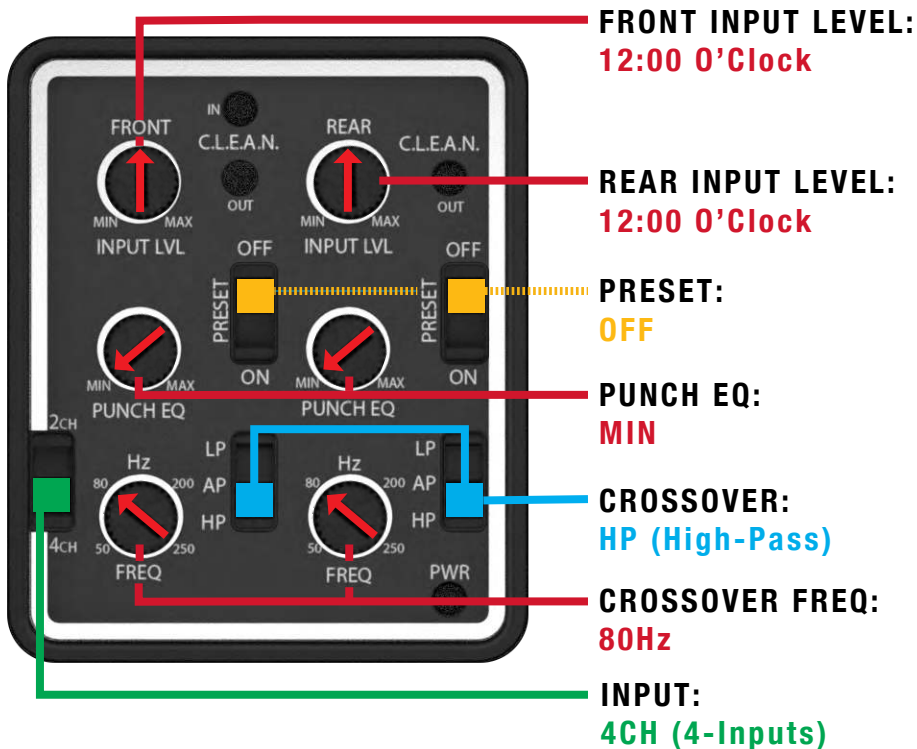

TEST & SETUP

After system is installed, test for proper operation and adjust radio settings to below configurations.



SPEED VOLUME:

Set AVC (auto volume control) to OFF position.



BASS:

Set to CENTER position.



TREBLE:

Set to CENTER position.



FADER:

Test front/back fader control.
Set to DESIRED rider position.



AUDIO ROUTING:

If no audio, check Music/Media is set to speakers, not headphones.

2014+ Harley-Davidson® Factory Amp Bypass Plugs



MOTORCYCLE AUDIO

#ROCKFORDFOSGATE



Boom!™ Audio Stage 1 **CVO 4-Speaker**

Factory amplifier in fairing.
Controls fairing speakers and
TourPak.

Bypass Plugs:

- BOOM 1 SYSTEM BYPASS

Boom!™ Audio Stage 2 **CVO Ultra 4-Speaker**

Factory amplifier in fairing.
Controls fairing speakers and
TourPak.

Bypass Plugs:

- CVO ULTRA BOOM 1 FAIRING

Boom!™ Audio Stage 2 **CVO Road Glide 4-Speaker**

Fairing amp controls upper
speakers. Left bag amp con-
trols baglid speakers.

Bypass Plugs:

- BOOM 4-SPEAKER FRONT
- BOOM 4-SPEAKER REAR

Boom!™ Audio Stage 2 **CVO 6-Speaker**

Fairing amp controls upper
speakers. Left bag amp con-
trols left lower & baglid
speakers. Right bag amp
controls right lower & baglid
speakers.

Bypass Plugs:

- BOOM 4-SPEAKER FRONT
- CVO AMP BYPASS LEFT SADDLEBAG
- CVO AMP BYPASS RIGHT SADDLEBAG

